

## CUSTOMER FEATURE HIGHLIGHTS

Be sure you understand and can operate the following:

- **Automatic climate control system:**
  - Review defogging and defrosting procedures; using the dual front climate controls.
- **Tire Pressure Monitoring System:**
  - Make sure the customer knows what each icon means.
- **Windshield wiper/washer controls:**
  - Make sure the customer can wash the windshield and understands how to adjust time on the intermittent setting and operate the rear wiper/washer.
- **Audio system operation:**
  - Make sure radio stations are pre-set and the customer knows how to set them.
- **Explain the first service procedure.**
- **Review America's Best Warranty™**
- **Answer the customer's recurring questions.**

### I. APPROACHING THE VEHICLE—*Have the customer take and operate the keys, remote keyless entry system and security system*

- **Keys:** Every Azera has two keys that work in every lock and a **valet key** that cannot unlock the trunk or glovebox.

*NOTE: If you use a key to unlock a door and the security system is armed, opening the door will activate the alarm.*

- **Remote keyless entry system:** Every Azera has two remote keyless entry fobs:

#### UNLOCK

Press (unlock icon) once to disarm the alarm and unlock the driver's door.

Press (unlock icon) twice within four seconds to unlock all of the doors.

#### PANIC FEATURE

Press and hold (panic icon) to activate the horn and flashing lights for 30 seconds; press (panic icon) to turn off Panic Mode:

- Your customers can use this in a parking lot as a vehicle locator.

#### TRUNK UNLOCK

Press and hold for more than one second to unlock the trunk.

- **Theft-deterrent system:** All models have a theft-deterrent system with an alarm:
  - It is automatically armed every time the vehicle is locked via the remote keyless entry system.

 
#### ADDITIONAL FEATURES

- **Alloy wheels:** Improve looks, dissipate brake heat more efficiently, lighter weight improves fuel economy and handling.
- **Aerodynamic styling:** Reduces wind resistance for quieter cabin and enhanced efficiency.



### II. ENTERING—*Help your customer make the adjustments when they sit in the vehicle*

- Front seat adjustments:
  - Headrest height: Pull up to raise; to lower, press the lock knob while pressing down on the headrest.
  - Headrest forward or backward: Pull forward to adjust to one of three positions; to adjust rearward, pull all the way forward, then release.
  - Power seat controls
  - Seat forward and back
  - Seat height
  - Seatback angle
  - Lumbar support

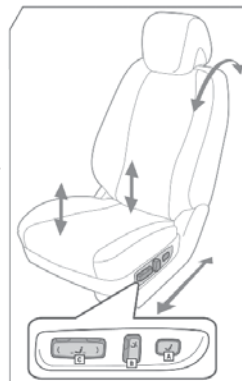

- **Driver's memory feature** (if equipped):

#### To store driver's seat positions:

1. Shift transmission into Park while ignition switch is on.
2. Adjust the driver's seat, outside rearview mirrors and steering wheel to desired positions.
3. Press SET button on the control panel until the system beeps.
4. Press memory button 1 or 2 within 5 seconds of pressing the SET button, the system will beep twice when memory has been successfully stored to that button.



#### To recall positions from memory:

 
1. Shift transaxle lever into Park while ignition switch is on.
2. To recall the position in memory, press the desired memory button—the system will beep once, then the driver's seat, outside rearview mirrors and steering wheel will automatically adjust to the stored positions.

- **Seatbelts:** Adjust belt height so it lies across your chest and midway over your shoulder nearest the door and not your neck:

- To raise, pull it up.
- To lower, push it down while pressing the height adjuster button.

- **Power windows:**


- **Auto up/down** (front windows only)—controlled by main switch:
  - Press the AUTO switch fully down to completely open the window.
  - To fully close the window automatically, pull the AUTO switch fully up.
  - To stop the window at any desired position while the window is moving, pull up or down, then release the AUTO switch.

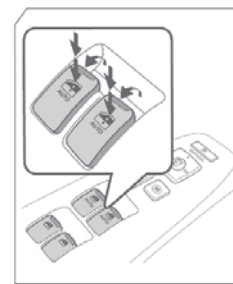

- **Mirrors:**

Inside: Rearview mirror/compass/HomeLink®:

 **HomeLink®:** A, B, C replaces radio frequency (RF) transmitters used for garage doors, security gates, etc.:

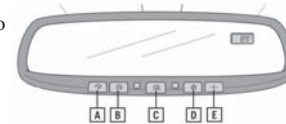


- Additional HomeLink® information can be found at: [www.homelink.com](http://www.homelink.com) or by calling 800-355-3515.

**Auto dimming on/off function "D":** When turned on, this feature will automatically detect and reduce rearview mirror glare.

**Compass function "E":** Press to turn the compass on and off.

 Outside: To adjust the position of either mirror: Move selecting switch to the L (left) or R (right), adjust mirror angle by pressing the appropriate direction on the perimeter switch:

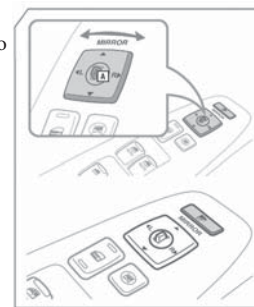


- **Power folding mirrors** (if equipped): Both left and right outside rearview mirrors can be folded for parking in narrow areas by pressing the outside rearview mirror folding switch.

*NOTE: Heated lenses are activated automatically when the defroster is switched on.*

### III. DRIVING POSITIONING—*Help your customer make these adjustments before taking a test-drive in the vehicle*

 - **Tilt and telescopic steering wheel—manual:** Push the lever downward to unlock, adjust upward or downward, forward or backward to the desired position, then securely tighten lever by pulling it upward.
- **Tilt and telescopic steering wheel—power** (if equipped): Move the adjusting switch upward or downward, forward or backward to the desired position.
- **Heated front seats** (if equipped): The front seats can be electrically heated individually when the ignition switch is on. When the switch is on, a number ranging from 1 to 5 is displayed on the switch (5 = warmest setting). To turn off the seat warmer, set the switch to 0.

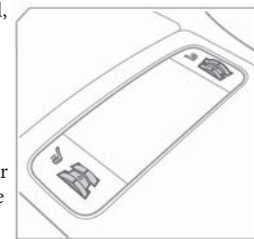


*NOTE: The seat warmer may not operate if the ambient temperature is warm.*

- **Adjustable pedals** (if equipped):

With the transmission in Park, turn the ignition key on.

Push the pedal position switch ▲ to move the pedals towards you.

 Push switch ▼ to move the pedals away from you.

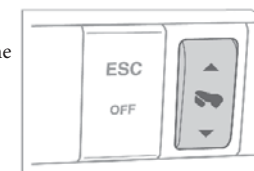


#### IV. DRIVER CONTROLS AND INCLEMENT WEATHER—

##### Explain these features before the test-drive

##### Automatic transmission

- **Shiftronic®:** Move shift lever into Shiftronic® gate to the right:

 - Push the lever forward to shift up one gear.
- Pull backwards once to shift down one gear.
- Start in second gear when wheel slippage may occur from a stop.
- Manually shift the transmission when driving up a hill to control gear hunting and when driving downhill to assist in braking.
- Transmission will not let you up or down shift outside of a safe operation level.

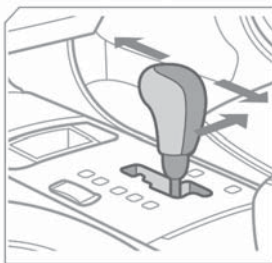

- **Electronic Stability Control (ESC):** ESC is designed to help the driver maintain control under adverse driving conditions.

**ESC ON** (recommended): The ESC OFF light is not lit up on the instrument panel.


**ESC OFF:** Press the ESC OFF button, ESC OFF will light up on the instrument panel. Press again for ESC ON.

**NOTE:** When the key is removed from the ignition, ESC is reset to the on state.

##### Headlights:

 - Rotate the switch to operate:

- **Auto:** Headlights come on automatically as needed (if equipped).
- **High beam activation:** Push the lever forward.
- Flash feature: Pull the lever toward you and release.

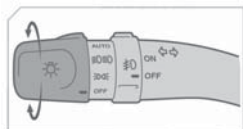

##### Cruise control:

- **To set cruising speed:** Press “D” to turn cruise control on.

 
Accelerate to the desired cruising speed (above 25 mph).

Press “C” and remove your foot from the accelerator pedal.

- **To accelerate or decelerate speed:** ACCELERATE “A”: Press “A” to accelerate your speed with the cruising speed set.

COAST “C”: Press “C” to slow the set speed with the cruising speed set.


- **To cancel the cruising speed:** Press CANCEL “B” button, press the brake pedal, depress the clutch pedal or press “D” to turn off cruise control.

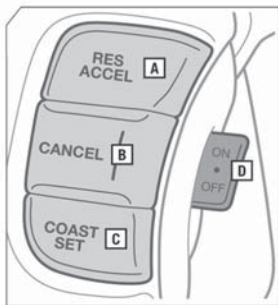

##### Windshield wipers:


- **Front:** Move the wiper/washer switch to one of the four positions:

 - **MIST:** Move the switch upward to allow the wipers to make a single wipe to clear any mist on the windshield.
- **INT (Intermittent):** Move the switch downward to first position—wiper speed may be varied by rotating the “INT TIME” switch: “F” allows less time between wipes; “S” allows more time between wipes.
- **LO:** Second downward position for low-speed operation.
- **HI:** Third downward position for high-speed operation.

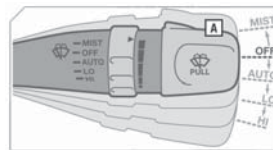

- **Automatic wiper operation** (if equipped):

 
- When the windshield wiper switch is placed in the AUTO position, the windshield sensor will automatically sense rain on the windshield.
- It senses the amount of rainfall and controls for the appropriate length of the intervals between wipes.

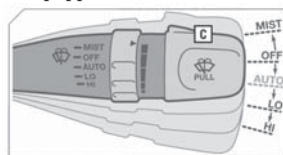

**NOTE:** With the switch in the AUTO position, the wipers will perform one sweep when the car is started.

##### Wiper/washer operation:

 
- Pull the wiper/washer lever towards you.
- When the washer is activated, the wipers automatically make two passes.
- The washer continues to operate until the lever is released.

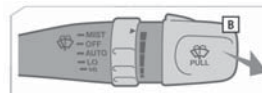

#### V. COMFORT AND CONVENIENCE—Features that enhance the driving experience

##### Heater/ventilation/air conditioning:
 
##### Automatic climate control:

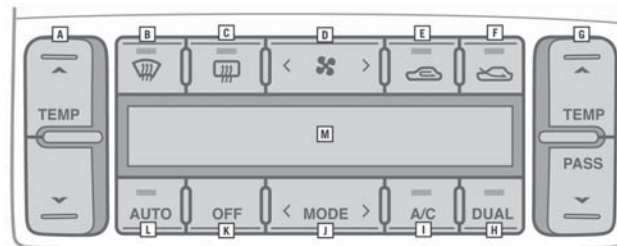


- **Automatic temperature control:** Push “L” for automatic operation.
- **Temperature control switch:** “A” controls driver’s side temperatures; “G” controls passenger’s side; press ▲ to raise temperature, press ▼ to lower temperature.

- **Front windshield defrost button:** Press “B” to clear the windshield of fog and/or thin ice.
- **Rear window defrost switch:** Press “C” to activate/deactivate the rear defroster.
- **Defrosting and defogging:**

1. Press the front windshield defrost control “B” (air conditioning will turn on automatically and the fresh air will be activated).
2. Set the temperature control “A” and “G” to the desired setting.
3. Set fan speed “D” to the highest setting.

**NOTE:** If the customer complains of excessive window fogging, the filter for the evaporator blower may need replacement. This filter is located in the evaporator housing behind the glovebox.

##### Audio system:

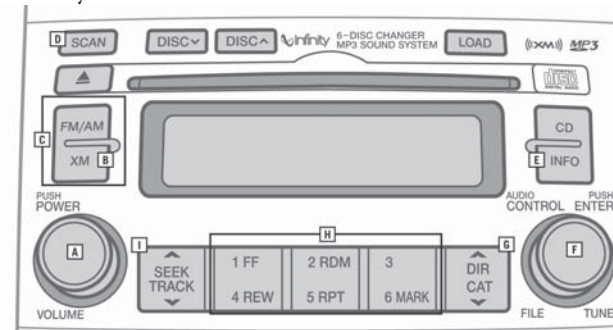 

- **Setting preset memory buttons** (AM, FM or XM):

1. Press the power button.
2. Select AM, FM or XM.
3. Tune the audio control knob to the desired channel.
4. Press and hold any preset button (1–6) until an audible beep is heard.

**NOTE:** FM has two bands for up to 12 presets. XM has three bands for up to 18 presets.

- **Adjusting the equalizer:**

1. Press the audio control knob “F” to select the following sound qualities:
  - Equalizer → Bass → Middle → Treble → Balance → Fader → Current State
2. Turn the audio control knob “F” to adjust the sound quality.


- **XM category search:**

1. While in XM mode, press DIR ▲ or CAT ▼ to scroll through music categories.
2. Press the audio control knob “F” to select the desired category.

**NOTE:** XM® Satellite Radio needs a clear view of the southern sky to ensure good reception. The trial XM subscription ends three months following the vehicle date of sale. Your customer should contact XM® Satellite Radio at 1-800-XM-RADIO (1-800-967-2346) to renew their XM subscription. For more XM® Satellite Radio information, call 1-800-XM-RADIO (1-800-967-2346) or go online at XMRadio.com.

## V. COMFORT AND CONVENIENCE *(continued)*

 - **Sunroof controls** (if equipped): The sunroof can only be opened, closed or tilted when the ignition switch is on:
  - **Opening the sunroof:** Press the SLIDE OPEN button A for more than one second to activate the one-touch feature.
  - **Closing the sunroof:** Press and hold the TILT UP button B until the sunroof is closed.
  - **To tilt the sunroof:** Press the TILT UP button B.
  - **To close the sunroof:** Press the SLIDE OPEN button A and hold it until the sunroof is closed.

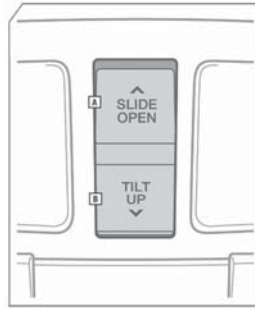

*NOTE: If you hold either button for more than one second, it will activate the one-touch feature.*

- **Power rear sunshade** (if equipped): The rear window shade switch is located on the center console:
  - Press the curtain switch to raise or lower the rear window curtain.

*NOTE: When the transmission is shifted into Reverse, the rear window sunshade will automatically lower if the sunshade is in the raised position.*



## VI. KIDS AND CARGO—Rear seat features and cargo options

- **Split fold-down rear seat:** One side can be folded for cargo while the other remains up for a passenger.
- **Child-proof rear door locks:** Can be set so rear doors cannot be opened from the inside.
- Trunk capacity:
  - 16.6 cubic feet

 
## VII. SECURITY SYSTEM

- **Steering wheel lock:** Locks automatically when the ignition key is turned to the LOCK position.
- **After exiting—how to lock doors:**
  - Push (lock icon) once on the fob to lock all doors.
  - Push (lock icon) a second time to hear a confirmation chirp and for the lights to flash:
    - All Azera models have a theft-deterrent system with an alarm that is armed automatically every time the vehicle is locked via the remote keyless entry system. When the system is armed, a red light on the driver's side dash blinks.
- **Trunk lid control button:** The trunk lid control button, located in the glovebox, is used to prevent unauthorized access to the trunk.

### LOCKING

To activate the trunk lock system so the trunk can only be opened with the master key, perform the following:

1. Open the glovebox.
2. Set the Trunk Lid Control button to the OFF position (not depressed); in the OFF position, the trunk cannot be unlocked with the trunk release lever or trunk open button on the transmitter, it can only be opened using the master key.
3. Close and lock the glovebox with the master key.

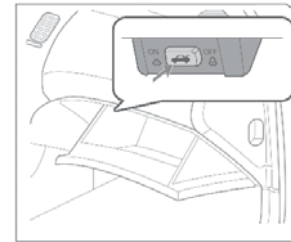


When leaving a key with a parking lot attendant or valet, perform steps 1 to 3 and leave the sub key with the attendant. The sub key can start the engine and operate door locks only. The trunk can never be opened with the sub key.

### RELEASING

 To release the trunk lock feature, open the glovebox with the master key and set the trunk lid control button to the ON position (depressed). In this position, the trunk will open with the trunk lid release lever or transmitter.

### TO UNLOCK USING THE KEY


To open the trunk lid, insert the key into the key slot located on the underside of the trunk lid above the rear license plate and turn it clockwise to unlock. The trunk compartment light illuminates when the trunk lid is opened.

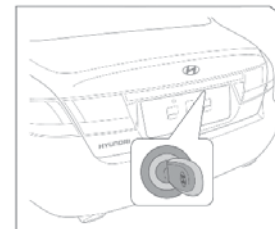

- **Fuel-filler door—refueling (driver's side):**

1. Pull on the fuel release lever.
2. Open the fuel-filler door.
3. Remove the fuel cap.
4. Pump fuel (regular 87 octane): 19.8-gallon capacity.
5. Replace the fuel cap tightly: minimum 3–5 clicks.
6. Close the fuel-filler door.

 *NOTE: After adding fuel, always reinstall the fuel cap fully and make sure it clicks a minimum of 3–5 times. Failure to do this may result in the **Check Engine** light illuminating.*

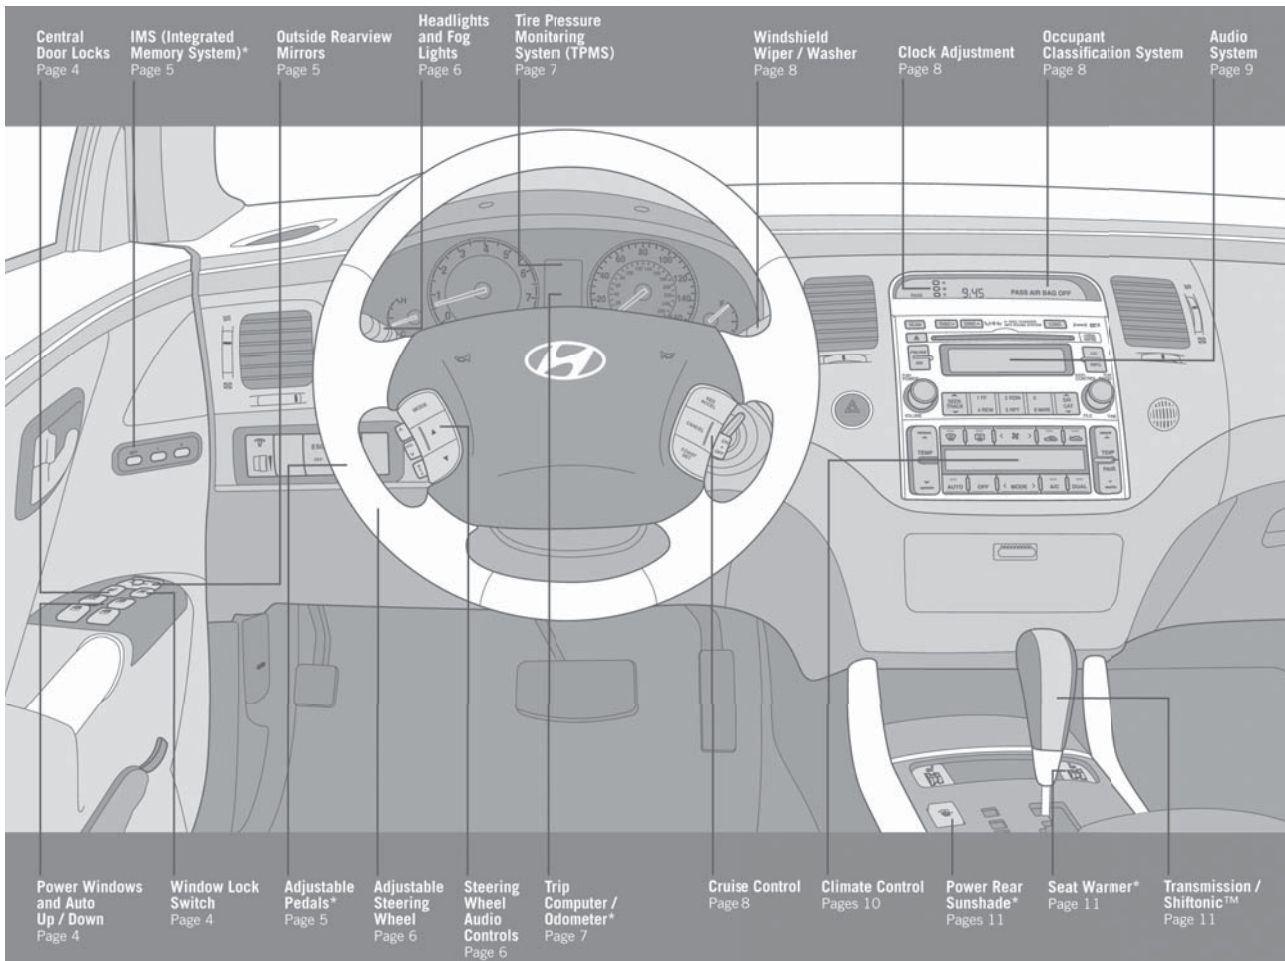

Central Door Locks  
Page 4

IMS (Integrated Memory System)\*  
Page 5

Outside Rearview Mirrors  
Page 5

Headlights and Fog Lights  
Page 6

Tire Pressure Monitoring System (TPMS)  
Page 7

Windshield Wiper / Washer  
Page 8

Clock Adjustment  
Page 8

Occupant Classification System  
Page 8

Audio System  
Page 9

Power Windows and Auto Up / Down  
Page 4

Window Lock Switch  
Page 4

Adjustable Pedals\*  
Page 5

Adjustable Steering Wheel  
Page 6

Steering Wheel Audio Controls  
Page 6

Trip Computer / Odometer\*  
Page 7

Cruise Control  
Page 8

Climate Control  
Pages 10

Power Rear Sunshade\*  
Pages 11

Seat Warmer\*  
Page 11

Transmission / Shiftonic™  
Page 11

### VIII. INSTRUMENT PANEL—What you see from the driver's seat

Directly in front of driver:

Instruments:

- **Trip computer:** See *Owner's Manual*.
- **Tire Pressure Monitoring System (TPMS):**
  - **Low Tire Pressure Indicator light:** Illuminates when one or more of the tires is significantly under-inflated. Safely park the car and check the tires as soon as possible; inflate them to the proper pressure.
  - **TPMS Malfunction Indicator light:** Illuminates and stays illuminated when there is a malfunction with the TPMS. Have the system checked by an authorized Hyundai dealer as soon as possible.
- **Steering wheel-mounted controls:**
  - Cruise control
  - Steering wheel-mounted audio controls: See *Owner's Manual*.
- **Stalk-mounted controls:**
  - Left-hand stalk: Turn signals and headlights
  - Right-hand stalk: Windshield wiper/washer
- **Center of instrument panel—upper portion:**
  - Audio controls
  - Clock adjustment
- **Center of instrument panel—lower portion:**
  - Heater/ventilation/air conditioning controls

