

## CUSTOMER FEATURE HIGHLIGHTS

Be sure you understand and can operate the following:

- **Keyless entry system:**
  - Review locking and unlocking procedures.
- **Tire Pressure Monitoring System:**
  - Make sure the customer knows what each icon means.
- **Windshield wiper/washer controls:**
  - Make sure the customer can wash the windshield and understands how to adjust time on intermittent setting/auto setting (if equipped).
- **Seat adjustments:**
  - Make sure the customer knows how to adjust the headrest.
- **Explain the first service procedure.**
- **America's Best Warranty™**
- **Address the customer's recurring questions.**

### I. APPROACHING THE VEHICLE—*Have the customer take and operate the keys, remote keyless entry system and security system*

- **Keys:** Every Elantra has two keys that work in every lock.  
*NOTE: If you use a key to unlock a door and the security system is armed, opening the door will activate the alarm.*
- **Remote keyless entry system:** Every Elantra has two remote keyless entry fobs:

#### UNLOCK

Press (unlock icon) once to disarm the alarm and unlock the driver's door.

Press (unlock icon) twice within four seconds to unlock all of the doors.

Press (trunk icon) to release the trunk lock.



#### PANIC FEATURE

Press and hold (panic icon) on the back of the fob to activate the horn and flashing lights for 30 seconds; press (panic icon) again to turn off Panic Mode:

- Your customers can use this in a parking lot as a vehicle locator.
- **Theft-deterrent system:** All Elantras have a theft-deterrent system with an alarm:
  - It is automatically armed every time the vehicle is locked via the remote keyless entry system.

#### ADDITIONAL FEATURES

- **Alloy wheels** (if equipped): Improve looks, dissipate brake heat more efficiently, lighter weight improves fuel economy and handling.
- **Aerodynamic styling:** Reduces wind resistance for quieter cabin and enhanced efficiency.
- **Locking fuel-filler door:** On the driver's side for convenience and security.

### II. ENTERING—*Help your customer make the adjustments when they sit in the vehicle*

- **Front seat adjustments:**
  - **Headrest height:** Pull up to raise; to lower, press the lock knob while pressing down on the headrest.
  - **Headrest forward or backward:** Pull forward to adjust to one of three positions; to adjust rearward, pull all the way forward, then release.
  - **Seat forward and back**
  - **Seat height**
  - **Seatback angle**
- **Seatbelts:** Adjust the belt height so it lies across your chest and midway over your shoulder nearest the door and not your neck:
  - To raise, pull it up.
  - To lower, push it down while pressing the height adjuster button.
- **Power windows:**
  - **Auto up/down** (driver's side only)—controlled by main switch:
    - Press the AUTO switch fully down to completely open the driver's window.
    - To fully close the driver's window automatically, pull the AUTO switch fully up.
    - To stop the window at any desired position while the window is moving, pull up or down then release the AUTO switch.

#### Mirrors:

Outside: To adjust the position of either mirror: Move selecting switch to L (left) or R (right), adjust mirror angle by pressing the appropriate direction on the perimeter switch.

*NOTE: Heated lenses are activated automatically when the defroster is switched on.*



### III. DRIVING POSITIONING—*Help your customer make these adjustments before taking a test-drive in the vehicle*

- **Tilt and telescoping steering wheel:** Adjust before driving:

 
 
**Tilt and telescoping:** Push lever "A" downward to unlock, adjust upward or downward, forward or backward to the desired position, then securely tighten lever by pulling it upward.

- **Heated front seats** (if equipped): SE only




### IV. DRIVER CONTROLS AND INCLEMENT WEATHER—*Explain these features before the test-drive*

- **Transmission:**
  - **Automatic transmission** (if equipped):
    - Foot must be on the brake pedal with the engine running to move the shift selector.
    - Move the shift lever to the selected gear.
  - **5-speed manual transmission** (if equipped):
    - The clutch pedal must be depressed to start the engine.
    - To shift into Reverse, lift the collar tab up and then shift into the Reverse gear position.

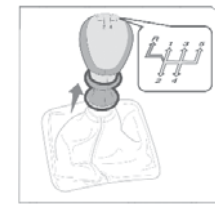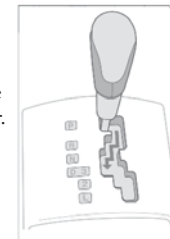


#### Headlights:

 - Rotate the switch to operate:
  - **High beam activation:** Push the lever forward.
  - **Flash feature:** Pull the lever toward you and release.

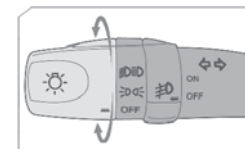

- **Fog light switch** (if equipped):
  - Rotate the switch to the on position.

 *NOTE: Fog lights only function when low beams are on.*

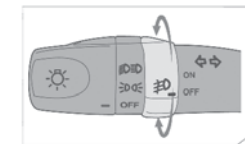


#### IV. DRIVER CONTROLS AND INCLEMENT WEATHER (continued)

##### • Cruise control:

###### ○ To set cruising speed:

 
- **Turn on** by pressing the On/Off switch, the CRUISE indicator light on the instrument cluster will illuminate.
- **Accelerate** to desired cruising speed (above 25 mph).
- **Press the “SET” switch**, then remove foot from the accelerator; your speed is set.
- **To accelerate**, press “ACCEL” to increase cruising speed.
- **To decelerate**, press “COAST” to slow cruising speed.

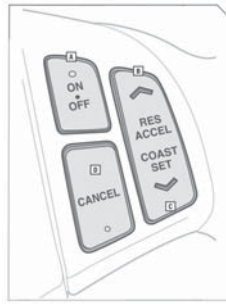

##### • Windshield wipers:


###### ○ Front: Move wiper/washer switch to one of the four positions:

 - **MIST:** Move the switch upward to allow the wipers to make a single wipe to clear any mist on the windshield.
- **INT (Intermittent):** Move the switch downward to first position—wiper speed may be varied by rotating the “INT TIME” switch: “F” allows less time between wipes, “S” allows more time between wipes.
- **LO:** Second downward position for low-speed operation
- **HI:** Third downward position for high-speed operation

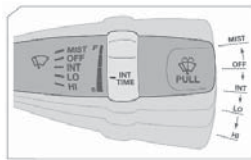


##### • Wiper/washer operation:

 - Pull the wiper/washer lever towards you.
- When the washer is activated, the wipers automatically make two passes.
- The washer continues to operate until the lever is released.



#### V. COMFORT AND CONVENIENCE—Features that enhance the driving experience
 
##### Heater/ventilation/air conditioning:

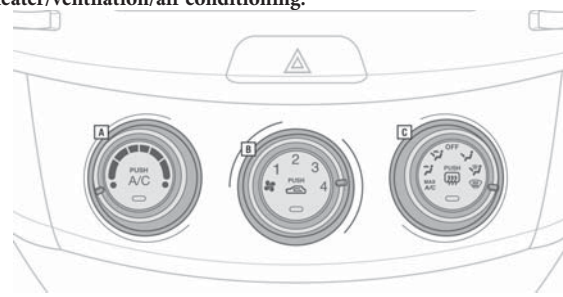


- You can quickly cool the inside of the vehicle by choosing MAX/AC mode on the airflow control:
  - In the MAX/AC mode, the air conditioning is turned on automatically and the recirculation mode will be activated.
  - The air conditioning cannot be turned off while in the MAX/AC mode.
- **Defrosting and defogging:**
  1. Set the temperature control to the desired setting.
  2. Set the fan speed to the highest setting.
  3. Set the airflow control to the defrost position.
  4. To speed up defogging, select fresh air mode.

*NOTE: If your customer complains of excessive window fogging, the filter for the evaporator blower may need replacement. This filter is located in the evaporator housing behind the glovebox.*

##### Audio systems:

 - **Setting preset memory buttons (AM, FM or XM):**

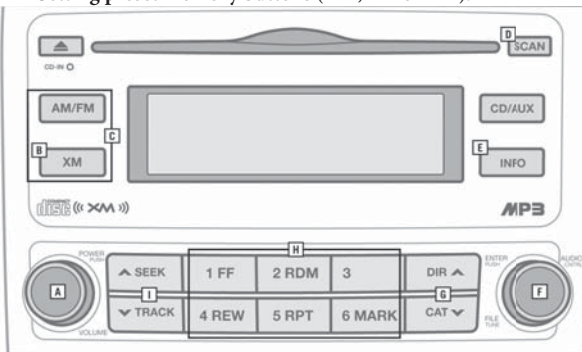

1. Press the power button.
2. Select AM, FM or XM.
3. Tune the audio control knob to the desired channel.
4. Press and hold any preset button (1–6) until an audible beep is heard.

*NOTE: FM has two bands for up to 12 presets. XM has three bands for up to 18 presets.*

- XM category search

1. While in XM mode, press the DIR ▲ or CAT ▼ to scroll through music categories.
2. Press the audio control knob to select the desired category.

- **Auxiliary input jack** (if equipped): Show your customers how to connect a portable music device to the auxiliary jack:



- Plug the unit into the jack.
- Press the CD/AUX button on the radio to select the auxiliary mode.

*NOTE: The radio will not switch to the AUX mode unless a portable music device is connected.*

- **Adjusting the equalizer:**

1. Press the audio control knob to select the following sound qualities:
  - Equalizer → Bass → Middle → Treble → Balance → Fader → Current State
2. Turn the audio control knob to adjust the sound quality.

*NOTE: XM® Satellite Radio needs a clear view of the southern sky to ensure good reception. The trial XM subscription ends three months following the vehicle date of sale. Your customer should contact XM® Satellite Radio at 1-800-XM-RADIO (1-800-967-2346) to renew their XM subscription. For more XM® Satellite Radio information, call 1-800-XM-RADIO (1-800-967-2346) or go online at XMradio.com.*

- **Sunroof controls** (if equipped): Can only be opened, closed or tilted when ignition switch is ON:

- **To slide open:** Press the SLIDE OPEN button for more than one second to activate the one-touch open feature.
- **To slide close:** Press and hold the TILT UP button until the sunroof is closed all the way.
- **To tilt the sunroof up:** Press the TILT UP button.
- **To close the sunroof:** Press the SLIDE OPEN button and hold it until the sunroof is closed.



#### VI. KIDS AND CARGO—Rear seat features, cargo options and trunk features

 
- **60/40 split fold-down rear seat:** One side can be folded for cargo while the other remains up for a passenger.
- **Rear cup holders:** Located in the center of the rear seat armrest.
- **Child-proof rear door locks:** Can be set so rear doors cannot be opened from the inside.
- **Trunk cargo capacity:** 14.2 cubic feet:
  - **To unlock the trunk:** Press and hold the trunk release button for longer than one second to unlock the trunk lid.
  - There is a glow-in-the-dark trunk release inside the trunk.

## VII. SECURITY SYSTEM

- **Steering wheel lock:** Locks automatically when the ignition key is turned to the LOCK position.
- **After exiting—how to lock doors:**
  - Push (lock icon) once on the fob to lock all doors.
  - Push (lock icon) a second time to hear a confirmation chirp and for the lights to flash.
  - All Elantras have a theft-deterrent system with an alarm that is armed automatically every time the vehicle is locked via the remote keyless entry system. When the system is armed, a red light on the driver's side dash blinks.
- **Fuel-filler door: refueling (driver's side):**
  1. Pull the fuel release lever/open fuel door.
  2. Remove the fuel cap.
  3. Pump fuel (regular 87 octane): 14.0-gallon capacity.
  4. Replace the fuel cap tightly: minimum 3–5 clicks.
  5. Close the fuel door.



**NOTE:** After adding fuel, always reinstall the fuel cap fully and make sure it clicks a minimum of 3–5 times. Failure to do this may result in the **Check Engine** light illuminating.

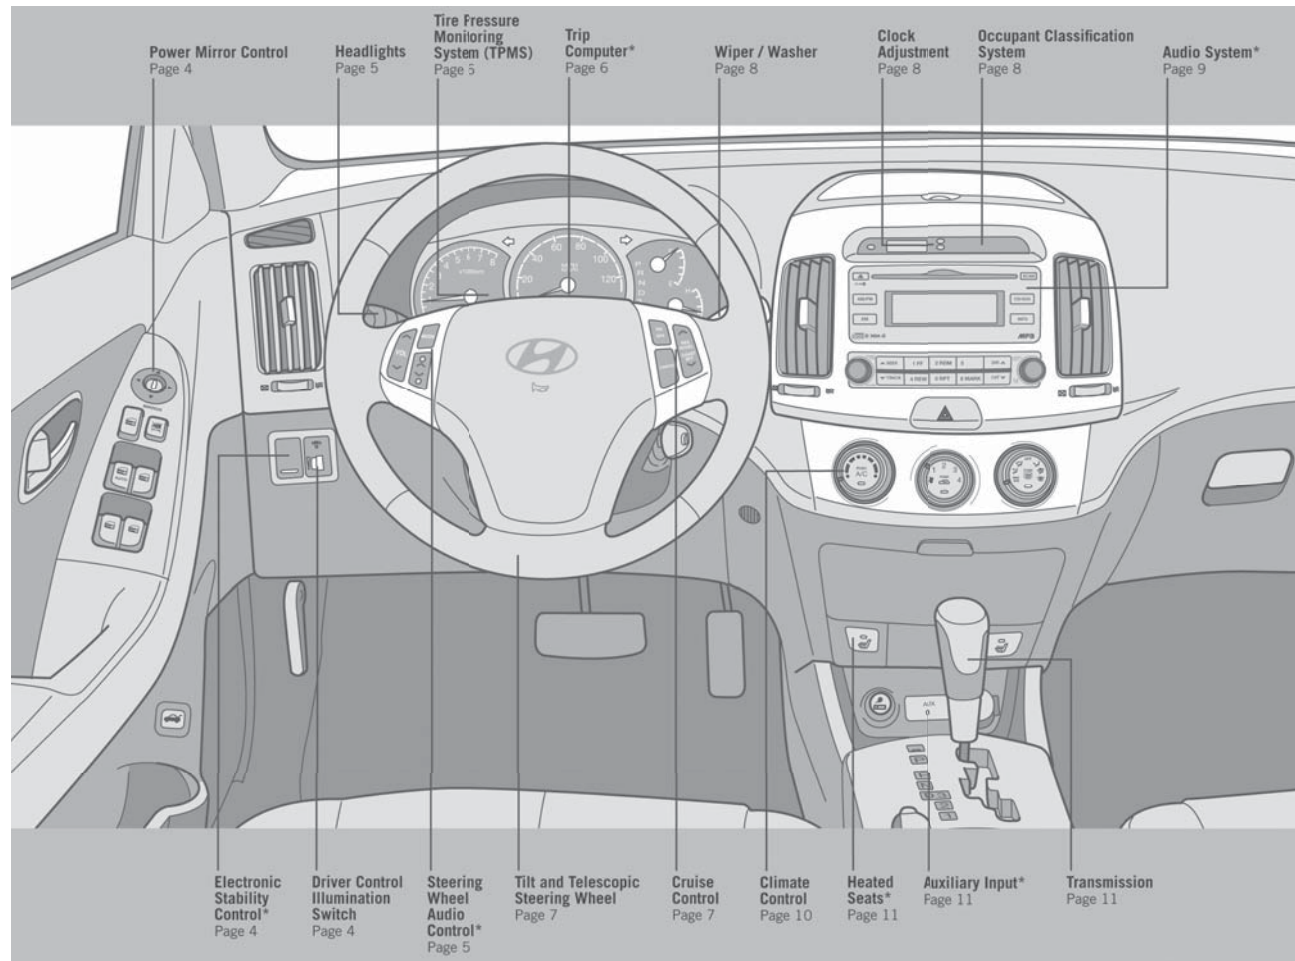

## VIII. INSTRUMENT PANEL—What you see from the driver's seat

Directly in front of driver:

Instruments:

- **Trip computer (if equipped)**
- **Tire Pressure Monitoring System (TPMS):**
  - **Low Tire Pressure Indicator light:** Illuminates when one or more of the tires is significantly under-inflated. Safely park the car and check the tires as soon as possible; inflate them to the proper pressure.
  - **TPMS Malfunction Indicator light:** Illuminates and stays illuminated when there is a malfunction with the TPMS. Have the system checked by an authorized Hyundai dealer as soon as possible.



- **Steering wheel-mounted controls:**
  - Cruise control
  - Steering wheel-mounted audio controls—*Owner's Manual*
- **Stalk-mounted controls:**
  - Left-hand stalk: turn signals, headlights and fog lights
  - Right-hand stalk: windshield wiper/washer
- **Center of instrument panel—upper portion:**
  - Audio controls
  - Clock adjustment
- **Center of instrument panel—lower portion:**
  - Heater/ventilation/air conditioning controls