

CUSTOMER FEATURES HIGHLIGHTS

Be sure the customer can operate the following key features:

- **Automatic or manual climate control system:**
 - Review defogging and defrosting procedures.
- **Tire Pressure Monitoring System:**
 - Make sure the customer knows what each icon means.
- **Windshield wiper/washer controls:**
 - Make sure the customer can wash the windshield and understands how to adjust time on intermittent setting.
- **Audio system operation:**
 - Make sure radio stations are pre-set and the customer knows how to set them.
- **Explain the first service procedure.**
- **Review America's Best Warranty™**
- **Answer the customer's recurring questions.**

I. APPROACHING THE VEHICLE—*Have the customer take and operate the keys, remote keyless entry system and security system*

- **Keys:** Every Sonata has two keys that work in every lock and a **valet key** that cannot unlock the rear seatbacks or the trunk.

NOTE: If you use a key to unlock a door and the security system is armed, opening the door will activate the alarm.

 
- **Remote keyless entry system:** Every Sonata comes with two remote keyless entry fobs:

UNLOCK

Press (unlock icon) once to disarm the alarm and unlock the driver door.

Press (unlock icon) again within four seconds to unlock all doors.

Press (trunk icon) to release the trunk lock.

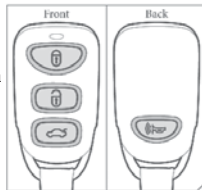

PANIC FEATURE

Press and hold (panic icon) on back of fob to activate the horn and flashing lights for 30 seconds; press again to turn off Panic Mode:

- Your customers can use this in a parking lot as a vehicle locator.
- **Theft-deterrent system:** All Sonatas come standard with a theft-deterrent system with an alarm:
 - It is automatically armed every time the vehicle is locked via the remote keyless entry system.

ADDITIONAL FEATURES

- **Alloy wheels:** Lighter weight improves fuel economy and handling.
- **Aerodynamic styling:** Reduces wind resistance for quieter cabin and enhanced efficiency.
- **Locking fuel-filler door:** On the driver's side for convenience and security.

II. ENTERING—*Cover what you do when you first sit in the vehicle*

- Front seat adjustments:
 - **Headrest height:** Pull up to raise; to lower, press the lock knob while pressing down on the headrest.
 - **Headrest forward or backward:** Pull forward to adjust to one of three positions; to adjust rearward, pull all the way forward, then release.
 - **Seat forward and back**
 - **Seat height**
 - **Seatback angle**
 - **Lumbar support**
- **Seatbelts:** Adjust the belt height so it lies across your chest and midway over your shoulder nearest the door and not your neck:
 - To raise, pull it up.
 - To lower, push it down while pressing the height adjuster button.

- **Power windows:**

- **Auto up/down** (driver's side only)—controlled by main switch:

- Press the AUTO switch fully down to completely open the driver's window.
- To fully close the driver's window automatically, pull the AUTO switch fully up.
- To stop the window at any desired position while the window is moving, pull up or down then release the AUTO switch.



- **Mirrors:**

Inside: Sonata Limited has an **auto-dimming mirror** that automatically responds to lights at night, as well as a **HomeLink™ universal transceiver**—refer to the *Owner's Manual* for more information.

Outside: To adjust the position of either mirror: Move selecting switch "A" to the R (right) or L (left), adjust mirror angle by pressing the appropriate direction on the perimeter switch.

NOTE: Heated lenses are activated automatically when the defroster is switched on.

 


III. DRIVING POSITIONING—*Help your customer make these adjustments before taking a test-drive in the vehicle*

- **Tilt and telescopic steering wheel:** Adjust *before* driving:

Tilt only: Pull the lever towards you, adjust the steering wheel to the desired position, release the lever and make sure the steering wheel locks in place.

Tilt and telescopic: Push lever "A" downward to unlock, adjust upward or downward, forward or backward to the desired position, then securely tighten lever by pulling it upward.

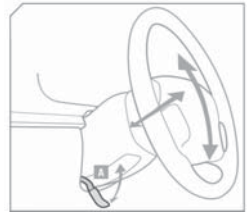

- **Heated front seats:** SE only

IV. DRIVER CONTROLS AND INCLEMENT WEATHER—*Explain these features before the test-drive*

- **Transmission:**

 
- **Automatic transmission** (if equipped):

- **Shiftronic®:** Move the shift lever into Shiftronic® gate to the right:
- Push this lever forward to shift up one gear.
- Pull the lever backwards once to shift down one gear.




- **5-speed manual transmission** (if equipped):

- To shift into Reverse, lift the collar tab up and then shift into the Reverse gear position.

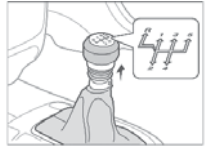

- **Headlights:**

 
- Rotate the switch to operate:
 - **Auto:** Headlights come on automatically as needed (if equipped).
 - **High beam activation:** Push the lever forward.
 - **Flash feature:** Pull the lever toward you and release.

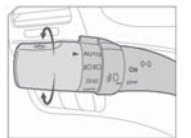

- **Fog light switch** (if equipped):

- Rotate the switch to the on position.

 NOTE: Fog lights only function when low beams are on.



IV. DRIVER CONTROLS AND INCLEMENT WEATHER (continued)

• Cruise control:

○ To set cruising speed:

 
- **Turn on** by pulling the switch, the CRUISE indicator light on the instrument cluster will illuminate.
- **Accelerate** to desired cruising speed (above 25 mph).
- **Press the “SET” switch**, then remove foot from the accelerator; your speed is set.
- **To accelerate:** Press “ACCEL” to increase cruising speed.



• Windshield wipers:


○ Front: Move wiper/washer switch to one of the four positions:

- **MIST:** Move the switch upward to allow the wipers to make a single wipe to clear any mist on the windshield.
- **INT (Intermittent):** Move the switch downward to first position—wiper speed may be varied by rotating the “INT TIME” switch: “F” allows less time between wipes, “S” allows more time between wipes—then the wiper interval varies automatically with road speed so as the car speeds up, wipers wipe at a faster rate.
- **LO:** Second downward position for low-speed operation
- **HI:** Third downward position for high-speed operation

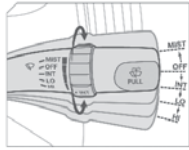


• Wiper/washer operation:

 - Pull the wiper/washer lever towards you.
- When the washer is activated, the wipers automatically make two passes.
- The washer continues to operate until the lever is released.



V. COMFORT AND CONVENIENCE—Features that enhance the driving experience

 Heater/ventilation/air conditioning:

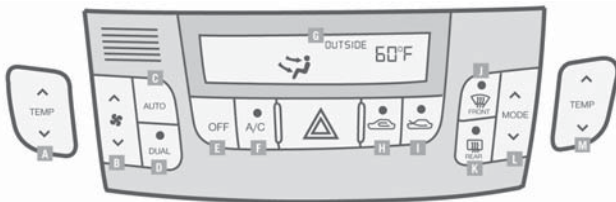

Automatic climate control:

 
- **Automatic temperature control:** Push “A” for automatic heating and cooling.
- **Temperature control switch:** Turn left for cooler temperatures, turn right for warmer temperatures.

- **Front defrost switch:** Press “B” to clear windshield of fog and/or thin ice.
- **Rear window defrost switch:** Press “D” to activate/deactivate the rear defroster.
- **Defrosting and defogging:**
 1. Set the temperature control to desired setting.
 2. Set the fan speed to the highest setting.
 3. Press the front windshield defrost switch.
 4. To speed up defogging, select the fresh air mode.

NOTE: On the automatic climate control system, turn the fan speed control to the desired speed to turn the fan on. Pressing the OFF button turns the fan off.


NOTE: If your customer complains of excessive window fogging, the filter for the evaporator blower may need replacement. This filter is located in the evaporator housing behind the glovebox.

Manual climate control:

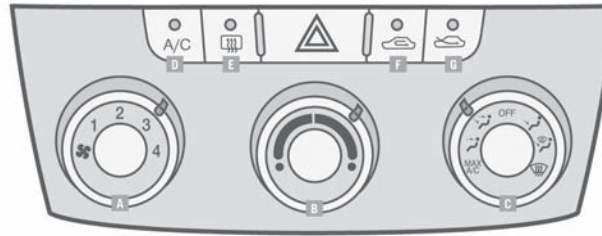

- You can cool the inside of the vehicle quickly by choosing MAX/AC mode on the airflow control.
- In the MAX/AC mode, the air conditioning is turned on automatically and the recirculation mode will be activated.
- The air conditioning cannot be turned off while in the MAX/AC mode.
- **Defrosting and defogging:**
 1. Set the temperature control to the desired setting.
 2. Set the fan speed to the highest setting.
 3. Set the airflow control to the defrost position.
 4. To speed up defogging, select fresh air mode.

 Audio system:

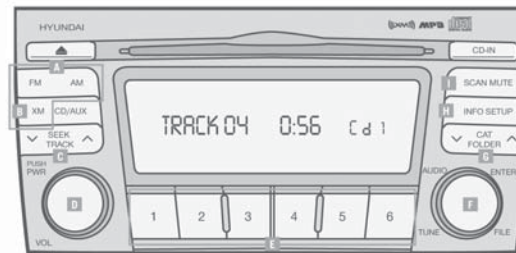

- **Setting preset memory buttons (AM, FM or XM):**
 1. Press the power button.
 2. Select AM, FM or XM.
 3. Tune the audio control knob to the desired channel.
 4. Press and hold any preset button (1–6) until an audible beep is heard.

NOTE: FM has two bands for up to 12 presets. XM has three bands for up to 18 presets.

• XM category search:

1. While in XM mode, press DIR ▲ or CAT ▼ to scroll through music categories.
2. Press the audio control knob to select the desired category.

 
• Adjusting the equalizer:

1. Press the audio control knob to select the following sound qualities:
 - Equalizer → Bass → Middle → Treble → Balance → Fader → Current State
2. Turn the audio control knob to adjust the sound quality.

NOTE: XM® Satellite Radio needs a clear view of the southern sky to ensure good reception. The trial XM® subscription ends three months following the vehicle date of sale. Your customer should contact XM® Satellite Radio at 1-800-XM-RADIO (1-800-967-2346) to renew their XM subscription. For more XM® Satellite Radio information, call 1-800-XM-RADIO (1-800-967-2346) or go online at XMRadio.com.

• Sunroof controls (if equipped): Can only be opened, closed or tilted when ignition switch is on:

- **To slide open:** Press the SLIDE OPEN button for more than one second to activate the 1-touch open feature.
- **To slide close:** Press and hold the TILT UP button until the sunroof is closed all the way.
- **To tilt sunroof up:** Press the TILT UP button.
- **To close the sunroof:** Press the SLIDE OPEN button and hold it until the sunroof is closed.

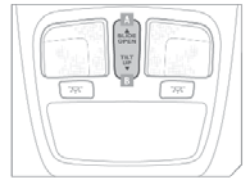

- **Power door locks:** Can be set by the dealer to lock automatically.
- **Front cup holders:** A small flap can be raised or lowered to accommodate beverage containers of different sizes.

VI. KIDS AND CARGO—Rear seat features, cargo options and trunk features

 
- **60/40 split fold-down rear seat:** One side can be folded for cargo while the other remains up for a passenger:
 - The seatbacks can be locked to help secure items in the trunk.
- **Rear cup holders:** Located in the center of the rear seat armrest.
- **Child-proof rear door locks:** Can be set so rear doors cannot be opened from the inside.
- **Trunk cargo capacity:** 16.3 cubic feet
 - **To unlock the trunk:** Press and hold the trunk release button for longer than one second to unlock the trunk lid.
 - There is a glow-in-the-dark trunk release inside the trunk.

VII. SECURITY SYSTEM

- **Steering wheel lock:** Locks automatically when the ignition key is turned to the LOCK position.
- **After exiting—how to lock doors:**
 - Push (lock icon) once on the fob to lock all doors.
 - Push (lock icon) a second time to hear a confirmation chirp and for the lights to flash.
 - All Sonatas have a theft-deterrent system with an alarm that is armed automatically every time the vehicle is locked via the remote keyless entry system. When the system is armed, a red light on the driver's side dash blinks.
- **Fuel-filler door—refueling (driver's side):**
 1. Push the fuel release button/open the fuel door.
 2. Remove the fuel cap.
 3. Pump fuel (regular 87 octane): 17.7-gallon capacity.
 4. Replace the fuel cap tightly: minimum 3–5 clicks.
 5. Close the fuel door.



*NOTE: After adding fuel, always reinstall the fuel cap fully and make sure it clicks a minimum of 3–5 times. Failure to do this may result in the **Check Engine** light illuminating.*

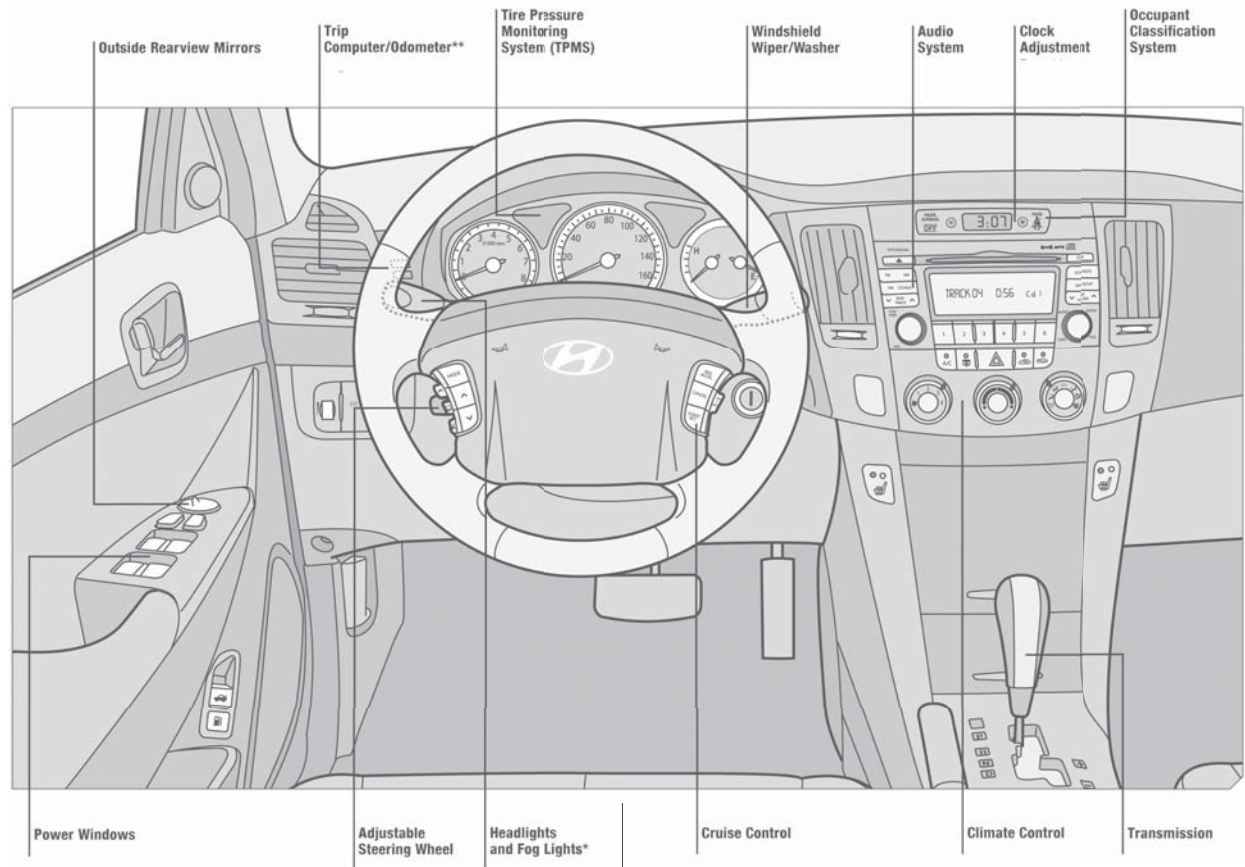

VIII. INSTRUMENT PANEL—What you see from the driver's seat

Directly in front of driver:

Instruments:

- **Trip computer** (if equipped)
- **Tire Pressure Monitoring System (TPMS):**
 - **Low Tire Pressure Indicator light:** Illuminates when one or more of the tires is significantly under-inflated. Safely park the car and check the tires as soon as possible; inflate them to the proper pressure.
 - **TPMS Malfunction Indicator light:** Illuminates and stays illuminated when there is a malfunction with the TPMS. Have the system checked by an authorized Hyundai dealer as soon as possible.



- **Steering wheel-mounted controls:**
 - Cruise control
 - Steering wheel-mounted audio controls—*Owner's Manual*
- **Stalk-mounted controls:**
 - Left-hand stalk: turn signals, headlights and fog lights
 - Right-hand stalk: windshield wiper/washer
- **Center of instrument panel—upper portion:**
 - Audio controls
 - Clock adjustment
- **Center of instrument panel—lower portion:**
 - Heater/ventilation/air conditioning controls